

- installation on the market
- NO spinning! Ratchet Caps are easily removed from used Spacer Bases with a quick pull
- Color-coded Spacer Bases are available in a variety of sizes (sold separately)






Place Spacer Bases (sold separately) once thinset has been applied.



Step 2:


Push Ratchet Cap down firmly over Spacer Base. Spin to tighten.



Step 3:

When mortar has cured, kick or use rubber mallet to remove. Save the caps to reuse for your next tiling job!



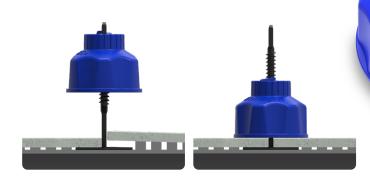












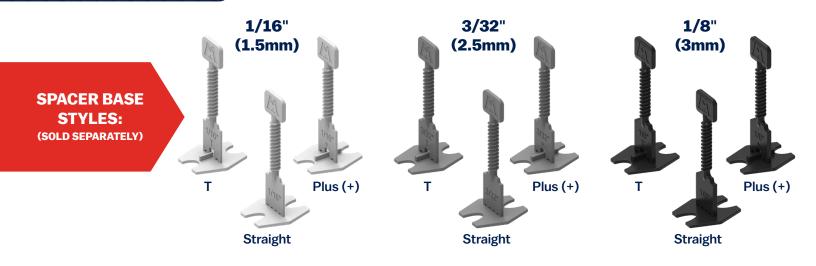

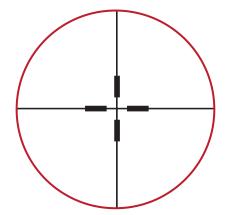


Using Straight Spacer Bases


Straight Spacer Bases layout

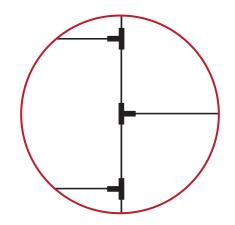

Using T Spacer Bases

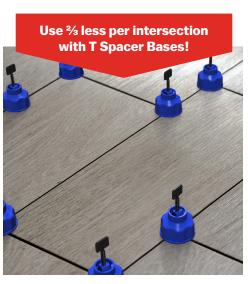

T Spacer Bases layout

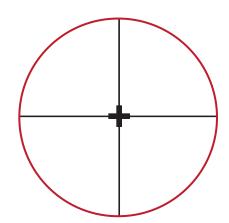

Using Plus (+) Spacer Bases



Plus (+) Spacer Bases layout

